

LAZER BOILING WATER

Start Up

1. Turn on water cock on wall (*anti-clockwise*)
2. Connect power and turn on
3. Open discharge tap and allow tank to fill.

Running

1. Boiling water - draw off water until thermostat cuts in - tank will then boil
2. Water at 99°F draw straight off

Close Down

1. Turn off cock on wall
2. Turn off power supply
3. Drain tank