

## WIRRUNA

### THE ELECTRICAL SYSTEM

Electricity is supplied to the Lodge on 415 volt 3 phase A.C. supply and reticulated at 240 volts.

The supply is taken from the Monaro Country Council (Cooma) underground main and enters the Lodge at the north west corner of the Sun Room. The galvanised iron switchbox located there contains links as the underground service also provides current to other Lodges.

From the link, supply is taken under the Lodge to the main switchboard located on the west wall of the Ski Room beside the entrance door. In this board are fixed links, main breaker, meters and time clocks. There are sub-boards in the Entrance Vestibule and Bedroom Corridor.

Members and guests are cautioned not to tamper with the installation. Do not use adaptors of any description on any outlet.

From the two sub-boards the supply is taken to the various light and power circuits throughout the house.

On arrival at the Lodge turn on only the following:-

1. Main light and power switch
2. Heating and hot water switch.

Both switches are located at the bottom of the main switchboard. The switchboard is located externally to the right of the external door to the Ski Room.

On leaving the Lodge EMPTY turn off switches in 1 and 2 above.

Do not operate any of the switches or circuit breakers on either of the electrical sub-boards except to reset.