



SERIES 2000 SYSTEM 1 FIRE PANEL

SYSTEM OPERATION:

- ALARM CONDITION:
1. Panel sounder will activate and will not silence.
 2. Bells will sound.
 3. Alarm indicator (red light) will indicate affected area
 4. Investigate area for fire.
 5. If no fire evident, check detectors for red light.
 6. Reset circuit by unlocking switches with panel key and turning knob to "Isolate/Reset" position.
 7. Press "Silence" button.
 8. Return switch to "Set" position.
 9. Should alarm re-occur, turn switch to "Isolate/Reset".
 10. Press "Silence" button.
 11. Lock switches by key removal.
 12. Notify Wormald International.

- FAULT CONDITION:
1. Panel Sounder will activate and will not silence.
 2. Fault indicator (Amber light) will indicate affected area.
 3. Investigate area for missing detector or loose connection
 4. If no fault evident reset circuit by unlocking switches with panel key, and turning knob to "Isolate/Reset" position.
 5. Press "Silence" button.
 6. Return switch to "set" position.
 7. Should fault re-occur, turn switch to "Isolate/Reset".
 8. Press "Silence" button.
 9. Lock switches by key removal.
 10. Notify Wormald International.

For service please call Wormald International CANBERRA on (062)80-5932.