

## "EXIT" lights for Fire System

The EXIT lights come in two types:-

- (a) Maintained - In this type the light is on all the time
- (b) Non maintained - In this type the light comes on only when there is a power failure

There is a red light and a test button on each unit. The red light indicates that there is a 240 Volt service to the unit which is continually topping-up a rechargeable installed in the unit. When the test button is pushed the non-maintained unit will illuminate. This confirms that the battery is functioning and the globe is working.