 


## Eswood UC25 Dishwashing Machine

### Step 1:

Make sure that the overflow tube is in its place. Cover the reservoir with provided covers and screens.

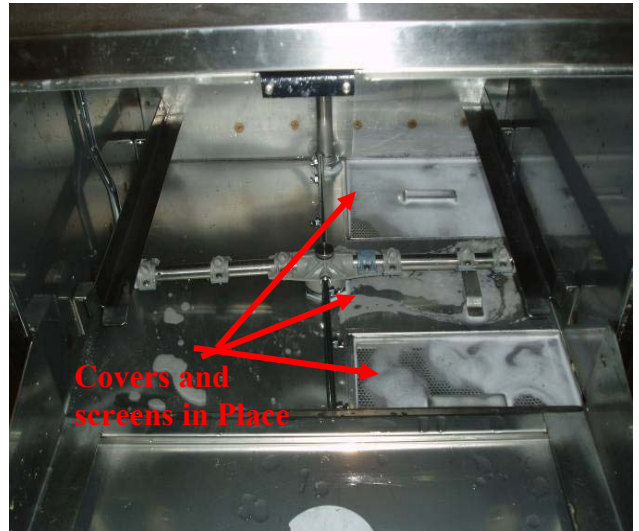

### Step 2:

Close the door, turn switch to "FILL" and press the "START" button. The cycle light illuminates while the machine is filling.



**Step 3:**

When the machine has finished filling, open the door and check under the centre panel that the water level is up to the overflow level. Repeat step 2 if the overflow level has not been reached.



**OverFlow level is at the top of the tube. Repeat STEP 2 if water not at this level**

**Step 4:**


Turn switch to “CYCLE” to operate the wash heater element. This heats the water in the reservoir.



**Turn switch to CYCLE position to heat water**

**Step 5:**

To adjust the cycle time, position the black line on the bezel, which is located around the start button to the degree of soiling on the dishware. For heavy soiling use a long cycle (bezel fully clockwise) and for light soiling use a short cycle.

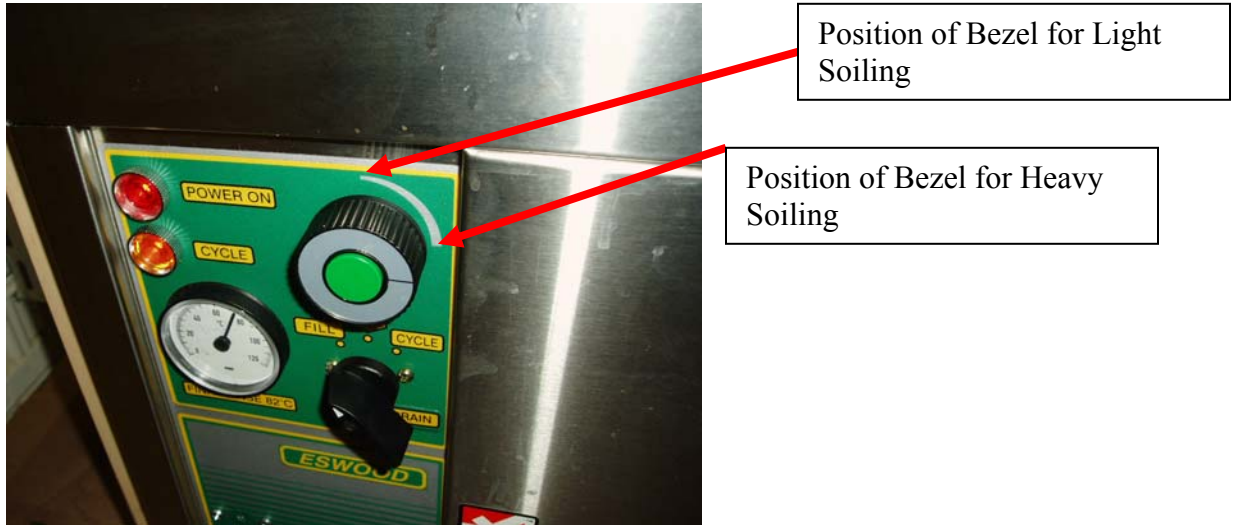

**Step 6:**

Scrape off any loose food matter and place dirty items in an appropriate Rack. When loading Racks, face the plates towards the door and load small items at the front and large items at the back.



**Step 7:**

Add ½ cup of washing detergent to the bottom of the machine and then slide rack in.  
NOTE: This washing powder lasts for about 4 or 5 washes. After 4 or 5 washes place another ½ cup of washing powder in the machine.

**Step 8:**

Close door and press the START button. The cycle will not start until the water in the reservoir is 82 degrees. When the temperature is at this level the washer will start automatically if the start button has been pushed.

The cycle takes about 2 minutes and the CYCLE light will go out at the finish of the cycle



## Shutting Down

*At the end of the washing before turning the Dishwasher off. i.e at the end of dinner or at the end of Breakfast.*

The dishwasher has to be drained at the end of each washing period. i.e after ALL the washing has been done after dinner etc.

### Step 1:

Turn the switch to DRAIN then press the START button




**Press the green START Button**

**Switch should be in Drain Position**

### Step 2:

After 15-20 seconds open the the door and remove the strainers and the centre panel and remove the overflow tube.

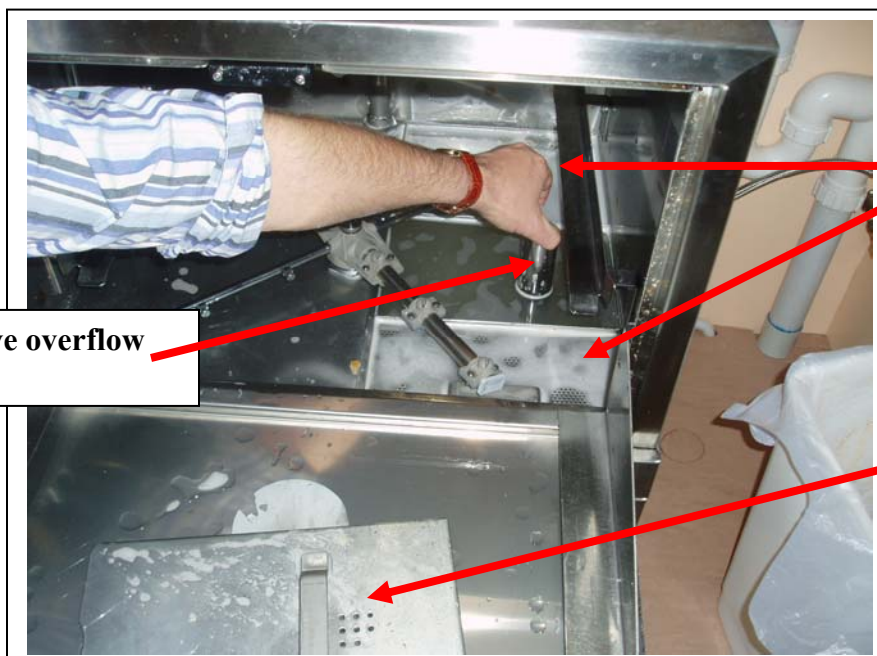

**Remove overflow tube**

**Remove Strainers**

**Remove centre Panel (already removed here)**

**Step 3:**

Allow to continue draining. The machine should stop automatically when empty.



**Step 4:**

Whilst the dish washer is draining clean the strainers in the sink.



**Step 5:**

After the water has drained replace the strainers , overflow tube and centre panel.

**Note for further details about cleaning the jets etc, see the manual.**